



MODEL TSL-50 / TSL-44  
Located on top frame plate

MODEL LTL-300  
Located on frame between front wheels



MODEL FSJ-40  
Located on side frame rail



MODEL TAJ-S-2000 /  
TABJ-1500  
Located on top of cylinder



MODELS FSJ-120 & FSJ-200 / FSJ-60  
Located on frame lift arm

