

MODEL HTJ-1000 / HTJ-800 / HTJ-800C

Located on caster bracket of up pedal



MODEL TJ-1000


Located on frame next to hydraulic unit

MODEL TCJ-500
Located on front left caster bracket



MODEL HR-300

Located on caster bracket of up pedal

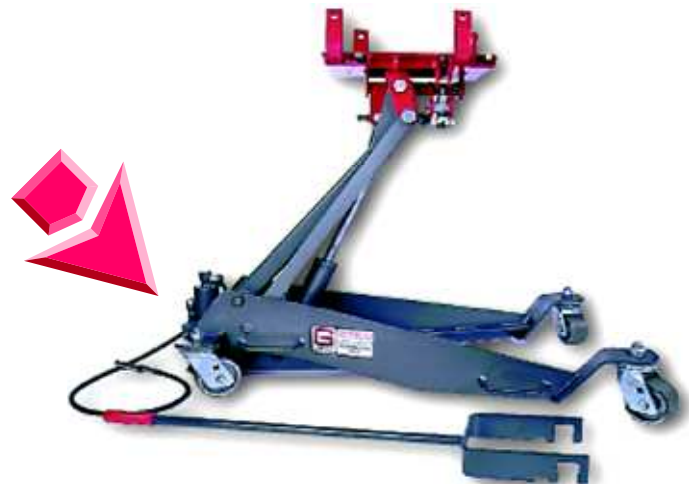

MODEL HTCJ-2000

Located on back right caster bracket

MODEL MM-2000 / MM-2000A/H

Located on frame next to hydraulic unit